

HYNOTONE

Lab Screamer

产品说明书

面板说明

电源输出

DC9V电源输出（外正内负，非隔离电源），
可用于给其他单块供电

电源输入

Type C 15V/5A，请使用支持PD快充
协议的充电器

电源开关

控制设备开关

音量控制

调节SPEAKER OUT的音量大小
（LINE OUT不受此旋钮控制）

功放输出

可连接4-16欧姆阻抗的吉他音箱箱体

LINE OUT

TRS平衡线路输出（无箱体模拟），
可连接到声卡，调音台等设备

输入接口

可连接前级、单块、或综合效果器


PRESENCE

控制高频响应，调节声音的远近感

RESONANCE

控制低频响应，调节低频的深度和增益

连 接

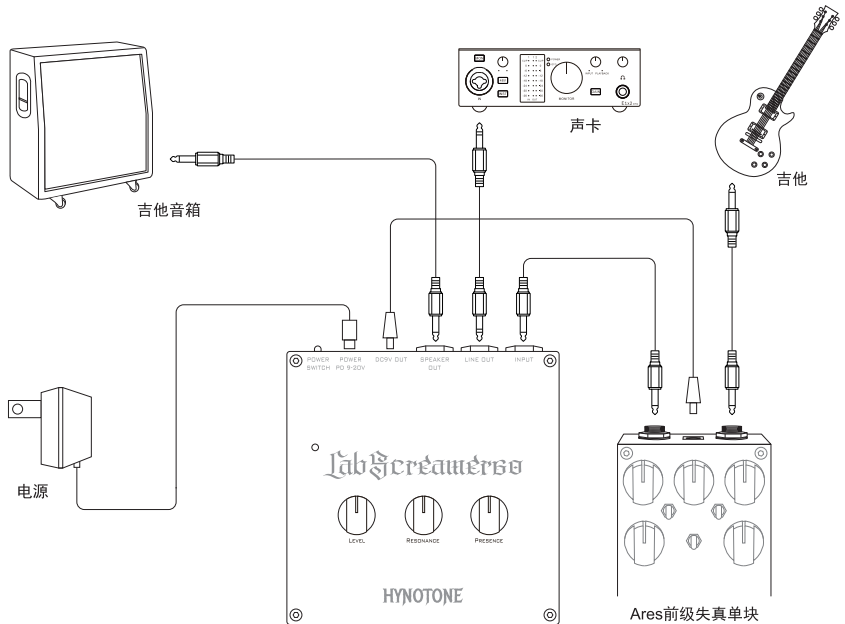

注意事项

- 请使用正确的PD电源连接，不使用时或雷雨天气请拔下电源。
- 为避免错误操作，请在进行任何连接前调低音量并关闭所有设备电源。
- 不得将本机搁置在高温、潮湿的环境，更不得淋雨或者受强烈冲击。
- 不得随意拆开机壳，如需维修应请专业维修人员处理。
- 对因产品的故障而直接或间接引起的任何损失或损坏不予负责。
- 因产品改进，规格及功能若有变动恕不另行通知。

参 数

尺 寸	120mm * 124mm * 56mm
重 量	470g
输 入 接 口	6.35mm TS
输 入 阻 抗	100K Ohm
功放输出接口	6.35mm TS
线性输出接口	6.35mm TRS
线性输出阻抗	200 Ohm
供 电 接 口	Type C（PD 15V / 5A）
电源输出接口	DC 9V / 200mA（DC 座 5.5mm*2.1mm，外正内负）
功放输出功率	60W（@1% THD, 4 Ohm）


合格证
QC PASS

HYNOTONE


Lab Screamer60

User Manual

Panel Descriptions

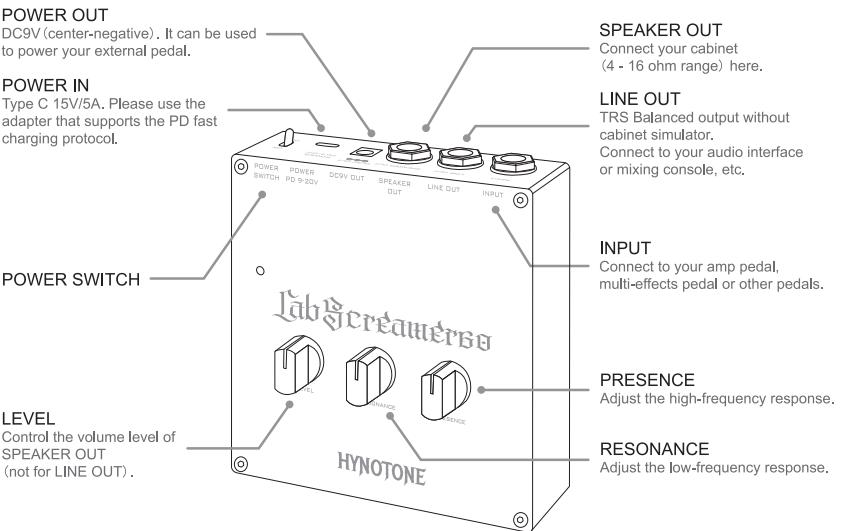

Connection

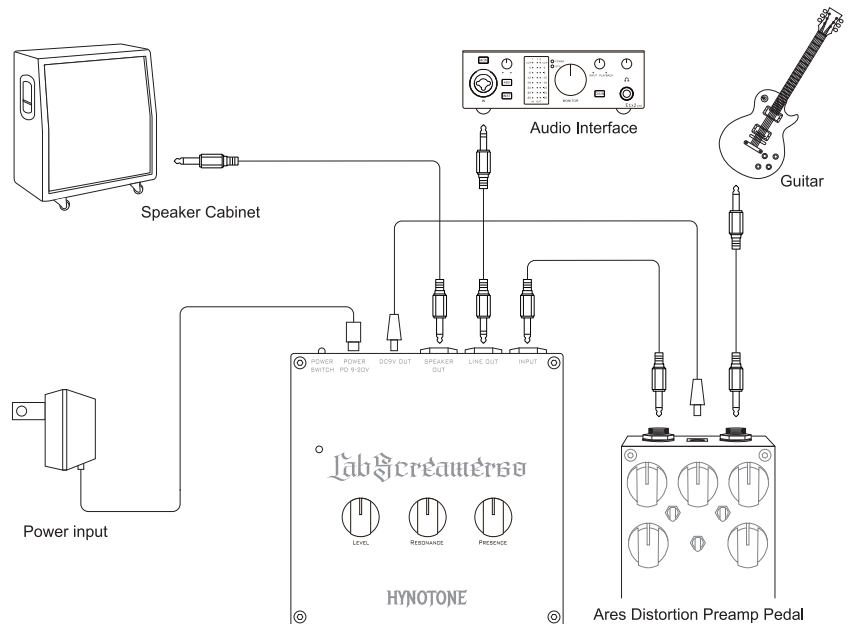

Precautions

- Please use a proper PD power supply for connection, and unplug the power supply when not in use or during thunderstorms.
- To avoid incorrect operation, please lower the volume and turn off all devices before making any connections.
- Do not keep the unit in a hot, humid environment or hit the unit strongly.
- Opening the case instantly voids the warranty!
- Topping accepts no liability for any loss or damage arising directly or indirectly from the failure of CabScreamer60.
- For improvement purpose, specifications subject to changes without prior notice.

Specifications

Measured	120mm * 124mm * 56mm
Weight	470g
Input	6.35mm TS
Input impedance	100K Ohm
Speaker out	6.35mm TS
Line out	6.35mm TRS
Line out impedance	200 Ohm
Power input	Type C (PD 15V / 5A)
Power output	DC 9V / 200mA (DC 5.5mm*2.1mm, center-negative)
Power amp ouput	60W (@1% THD, 4 Ohm)